

# FTI MODEL 100 MASTER OPERATORS MANUAL



Fueling Technologies, Inc.  
13434 NE 177<sup>th</sup> Place  
Woodinville, Washington 98072  
425-487-3464

.Copyright Fueling Technologies, Inc., 2001  
All Rights Reserved

REV 1.01 8/1/2002

DOC # 9000123

the keypad.



## POWER ON DISPLAY

FUELING TECHNOLOGIES  
Inc. - V1.05

Sample Display

When power is applied to the Master unit, it displays several check sum totals as it verifies the software. This will take 15 seconds, after which the Main Display appears.

## MAIN DISPLAY

Pressurized Tank  
Level System - P1000

Sample Display

## ACCESS TANK INFORMATION MENU

To view TANK INFORMATION, press the “ENT” key. A list of options will display. Only two options are displayed on the screen at a time. Use the Up and Down arrows to scroll through the options.

MENU OPTIONS ACCESSED BY SCROLLING WITH THE ↑ OR ↓ ARROWS:

TANK READINGS  
GENERAL TANK INFO  
SET DATE  
SET TIME




## Most Recent Tank Reading

▶ TANK READINGS  
GENERAL TANK INFO

### Sample Display

To view the most current tank reading move the flashing arrow next to tank readings line then press the “ENT” key. Enter tank number. Tank number is entered i.e. 0 then 1 then press the “ENT” key. Use the Up and Down arrows to view the data.

### Sample Displays

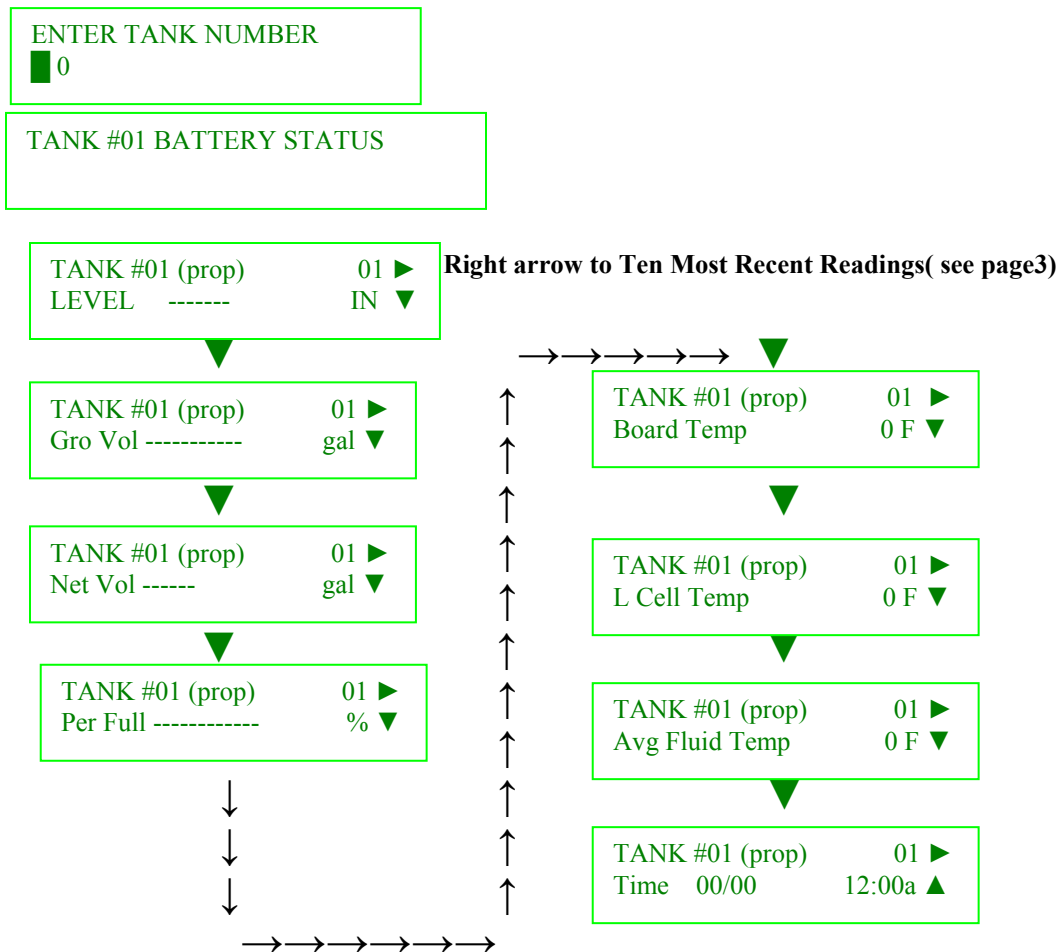



## Ten Most Recent Readings

To view the ten most recent tank readings, from the Main Menu select Tank Readings and press “ENT” key. Enter the tank number and press “ENT” key. The Left and Right arrows are used to scroll through the ten most recent tank readings. Note that the reading number changes for each reading. To return to the Main Menu, press the Left arrow key with the first tank reading displayed.

## Change Tank Number

When viewing a tank reading or a tank’s general information, the “#” key may be pressed to change to a different tank. Enter the new tank number and press “ENT” key. If a tank’s battery voltage is low, a screen will appear stating such after “ENT” key is pressed.

## General Tank Information

TANK READINGS  
▶ GENERAL TANK INFO

### Sample Display

To view a tank’s configuration data, move the flashing arrow next to the General Tank Info line by using the up and down arrows and press “ENT” key. Enter the tank number and press the “ENT” key. Use the Up and Down arrows to scroll through the tables. To return to the Main Menu, press the Left arrow key with the first tank reading displayed.

## Sample Displays

TANK #01 (prop)  
Sp. Gravity 0.505 ▼ ▲



TANK #01 (prop)  
Capacity 1154 gal ▲ ▼



TANK #01 (prop)  
Batt volt \*0.00 V ▲ ▼



TANK #01 (prop)  
Ser No. 11111111 ▲




## Set Date



**Sample Display**

The Date and time is used to generate date and time stamps for the tank readings. To set the date move the flashing arrow next the the Set Date line. Press the “ENT” key.

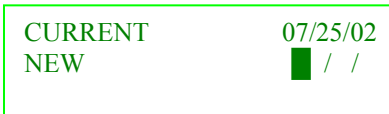

**Sample Display**

Enter the new date and press the “ENT” key. To exit without saving the new date, press the Left arrow key.

## Set Time



**Sample Display**

To set the time move the flashing arrow next to the Set Time line. Press the “ENT” key.



**Sample Display**

Enter the new time. Use the Up and Down arrows to change between AM and PM. When complete, press the “ENT” key. To exit without saving the new time, press the Left arrow key.

## Main Screen Refresh

The Master will return automatically to the Main Screen after about 50 seconds of in-activity on the keypad.